

SMS to MRS Device

MRS Devices (100 & 400) support receiving SMS text messages from version 4.2.1.0. The format of the text message is <code> <command>.

<code> is the SMS command authentication code set using the MRS Device Configuration utility's SMS section.

<command> is one of the following:

- reset device
- server <ip>
- restart ppp

Between the code and the command there is one space separator.

Text message example: ABC restart ppp

The command “reset device” restarts the MRS device. The command “restart ppp” terminates the current modem's ppp connection and starts it again. This command should be preferred over the command that resets the device, because it will not interrupt local recordings. The command “server <ip>” causes the device in client mode only to change its server's IP address to the one written in the message. After that, the device saves the new address and restarts itself.